

5. LOGI / LOGI PRO / COIN CONTROL. INVERTER MENU

The configuration menu allows dumping the inverter operation specific parameters from the microprocessor memory to the inverter memory.

This operation should not be repeated unless accidental corruption or inverter replacement.

Should you have any doubt on the inverter operation, you can compare the content of the inverter memory with the microprocessor parameters. In that case the configuration verification can be executed.

Access to inverter menu

With the **CONF** message on the display after accessing the TECHNICAL AREA:

- **LOGI, LOGI PRO Control**: press the ▼ key successively.
- **COIN Control**: press 2 key successively.

The message **InV** will be displayed.

Menu utilities

CLOSE THE WASHER DOOR.

Press the **MOD / PRO / 1** key to access the utilities menu.

Dumping of parameters

The message **LOAD** will be displayed.

Now, the microprocessor connects the inverter power supply.

Press the **ACCEL / 3** key.

The washer's microprocessor modifies the inverter parameters according to the washing machine operation pattern.

During this process the buzzer sounds.

Once this operation is satisfactorily over, - - **-Y** is displayed on the screen. Otherwise, an alarm message appears.

Verification of configuration parameters

When **LOAD** is displayed.

Press the ▼ / 2 key. The message **VerF** will be displayed.

Press the **ACCEL / 3** key.

Now, the washing machine microprocessor compares the parameters of the inverter memory with its own operation pattern.

During this process the buzzer sounds.

Once this operation is satisfactorily over, - - **-Y** is displayed on the screen. Otherwise, an alarm message appears.

Access the upper menu by pressing the **STOP** key.

9. INTELI CONTROL. FUJI INVERTER MENUS

The configuration menu allows dumping the inverter operation specific parameters from the microprocessor memory to the inverter memory.

This operation should not be repeated unless accidental corruption or inverter replacement.

Should you have any doubt on the inverter operation, you can compare the content of the inverter memory with the microprocessor parameters.

In that case the configuration verification can be executed.

Access to FUJI inverter menu

From the main screen in the TECHNICAL AREA,

- close the washing machine door
- select **FUJI Inverter** menu by the multi-function keyboard.

Confirm by **SEL** key.

Menu utilities are displayed.

Menu utilities

Verifying parameters

Close the washer door.

Select the function using the  /  keys.

Press the **SEL** key.

Now, the microprocessor connects the inverter power supply and compares the parameters of the inverter memory with its own operation pattern.

Once this operation is over, **OK** is displayed on the screen.

If during the verification the microprocessor detects an anomaly, the buzzer will be permanently connected.

Programming parameters

Close the washer door.

Select the function using the  /  keys.

Press the **SEL** key.

Now, the microprocessor connects the inverter power supply and modifies the inverter operation parameters according to the washing machine operation pattern.

Once this operation is over, **OK** is displayed on the screen.

If the initialising of the inverter has not been properly executed, the buzzer will be permanently connected.

Access to the upper menu by pressing the  key.